



FLEXSCREEN THE WORLD'S FIRST AND ONLY FLEXIBLE WINDOW SCREEN

**INNOVATIVE, DURABLE,
EFFORTLESS, AND BEAUTIFUL**

FlexScreen is everything
you want a screen to be



Shark Tank TM name and logo used with permission.
©2020 Sony Pictures Television Inc.

OUR PATENTED, SIMPLE, PROBLEM-SOLVING DESIGN IS TURNING HEADS IN THE INDUSTRY, EARNING MULTIPLE AWARDS, AND SELLING MILLIONS. WELCOME TO THE FUTURE OF WINDOW SCREENS!

TRADITIONAL WINDOW SCREEN

**technology is over 100 years old and loaded with problems.
We have all dealt with one or more of these issues:**

- Bulky and flimsy aluminum frames that bend and damage easily, require color matching, and impede your view to the outside.
- Complicated hardware that breaks with normal use and ~ makes installation and removal difficult and frustrating.
- Traditional window screen failure rate is approximately 1 per 30 units, driving up the overall cost of ownership and creating a great deal of inconvenience for the homeowner.

FLEXSCREEN

**solves every one of these problems with our innovative,
award-winning design:**

- Our sleek, flexible spring-steel frame, coated in exterior-grade PVC, is practically indestructible, scratch-resistant, and impervious to weather extremes. It hides in the screen pocket, eliminating the need for color matching, and dramatically improving sightlines. With FlexScreen you'll enjoy the ENTIRE view!
- ZERO hardware = effortless installation and removal in seconds - from outside OR inside your home!
- Our replacement rate is approximately 1 per 3,600 units - making FlexScreen essentially the last screen you will ever need to buy. In other words, FlexScreen owners never have to think about their window screens again!



www.WFO.direct

(716) **392-6812**

SALES • INSTALLATION



NAT-F222844-1

FULL SCREEN INSTALLATION & REMOVAL GUIDE

INSTALLATION

STEP 1

While keeping the sides compressed, place one top corner of the screen into the screen track.



STEP 2

Keeping both sides compressed, place the opposite top corner into the screen track.



STEP 3

Continue to keep sides compressed, and insert screen into a bottom corner. [Lift slightly if your window has a lip on the sill.] Release this side of the screen.



STEP 4

Place the last corner into the screen track and release completely once all corners are in place.



REMOVAL

STEP 1

Gently press on the center of the screen until you can wrap your hands around the FlexScreen frame. Squeeze both sides inward 4"-6".




STEP 2

While keeping the sides compressed, lift the screen up and remove one of the bottom corners from the screen track.



STEP 3

Remove the opposite bottom corner from the screen track.

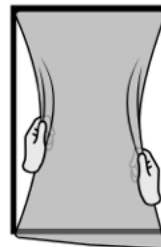

STEP 4

With both corners out of the screen track, pull FlexScreen down from the top and remove the screen.



WATCH THE VIDEO

